


C. Operation

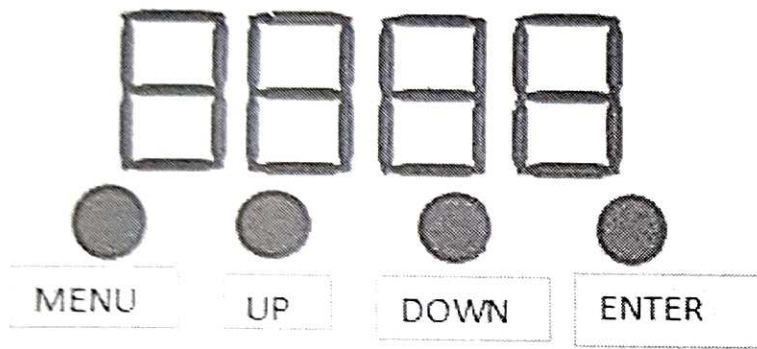

Menu - Mode Selection

Up - Value Added

Down - Value Subtracted

Enter - Confirmation

Function of LED Display

Menu	Numerical	Function	Description
D001	d001 - d512	DMX	N/A
CC01	CC01-CC15	Static Color Selection*	Choose 01 - 15 to adjust color
rb01	rb01-rb16	Gradient Change	Choose 01 - 16 to adjust changing speed
PL01	PL01-PL16	Pulse Change	Choose 01 - 16 to adjust changing speed
Sd01	Sd01-Sd16	Jump Change	Choose 01 - 16 to adjust changing speed
FL01	FL01- FL16	Full Color Strobe	Choose 01 - 16 to adjust changing speed
FF01	FF01- FF16	Color Changing Strobe	Choose 01 - 16 to adjust changing speed
Soud	/	Voice Activated	/
r000	r000-r255	Red Color Dimmer**	From Dark to Bright
g000	g000-g255	Green Color Dimmer**	From Dark to Bright
b000	b000-b255	Blue Color Dimmer**	From Dark to Bright
u000	u000-u255	White Color Dimmer**	From Dark to Bright

* 01-15 Color Selection Details:

No.	Color	No.	Color	No.	Color
CC01	Red	CC02	Blue + White	CC03	Green
CC04	Red + White	CC05	Blue	CC06	Green + White
CC07	RGB	CC08	Red + Blue	CC09	White
CC10	G + B + W	CC11	Red + Green	CC12	R + B + W
CC13	Blue + Green	CC14	R + G + W	CC15	RGBW


** Single color brightness adjustment can be only achieved when the value of other three colors is 000, otherwise individual color brightness cannot be adjusted

DMX Control

8 Channels

Channel	Value	Functional Description
CH1	0-255	Master Dimming (CH2-CH5)
CH2	0-255	Red Light – From Dark to Bright
CH3	0-255	Green Light - From Dark to Bright
CH4	0-255	Blue Light - From Dark to Bright
CH5	0-255	White Light - From Dark to Bright
CH6	0-63	OFF
	64-249	Strobe: CH2-CH5 Color Selection
	250-255	Voice Activated
CH7	0-10	OFF
	11-60	Static Color, CH8 – Color Selection
	61-110	Gradient Change, CH8 – Speed: From Slow to Fast
	111-160	Pulse Change, CH8 – Speed: From Slow to Fast
	161-210	Jump Change, CH8 – Speed: From Slow to Fast
	211-255	Voice Activated – Color Changing
CH8	0-255	Color Selection or Changing Speed, combine w CH7

D. Remote Controller Diagram

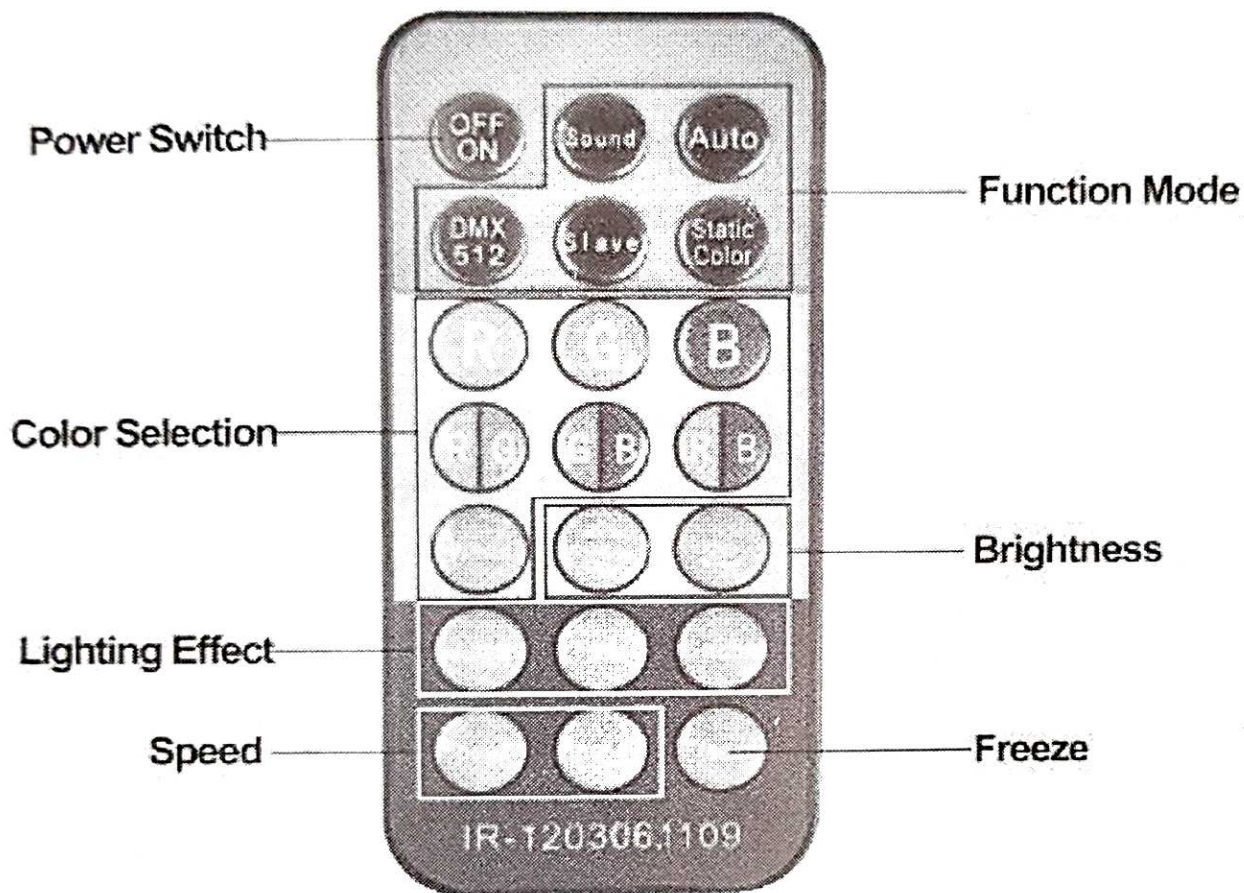

E. Note

1. Do not touch the light by hand because of high temperature after long time working
2. Never install the light on the surface of flammable objects
3. Please do not look at the light directly, in case it might damage your eyes
4. Indoor use only, do not use it frequently under the humid environment
5. Keep away from flammable objects at least 5m

12 LEDs Par Light w Remote Control

User Manual

Thank you for choosing the mini 12 LEDs par light with remote controller, which features jump, gradual, and sound activate strobe lighting effect. Whenever you go dancing or to a show, it can fuel your passion and create the best visual atmosphere. Professional used in Disco, Clubs, KTV, Pub, Bar, Banquet, weddings, etc. The manual describes how to use it and the safety issues. Please read it carefully and keep it as your reference.

A. Specifications:

- Power Voltage: AC90V-264V / 50-60 Hz
- Power Consumption: 12W
- LED: 12 pcs * 1W LED (Red*3, Green*3, Blue*3, White*3)
- Mode: Auto / Voice-activated / DMX / Master-slave
- Channel: 8CH
- Beam Angle: Approx. 25°
- Dimming: 0% - 100%
- Remote Range: 20m / 65ft
- Connector: 3 Pin XLR
- Waterproof: IP20
- Working Temperature: -20°C - 40°C
- Shell Material: ABS Plastic
- Size: 12*12*9cm / 4.7*4.7*3.5 inch
- Product Weight: 350g

B. Package Includes

- 1 x Par Light
- 1 x Remote Controller
- 1 x User Manual