

DMX CHANNELS

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION	
1	1	Pan	000-255	Movement 0°-540°	
2		Pan fine	000-255		
3	2	Tilt	000-255	Movement 0°-270°	
4		Tilt fine	000-255		
5	3	Colour	000-007		White
			008-014		Colour 1
			015-021	Colour 2	
			022-028	Colour 3	
			029-035	Colour 4	
			036-042	Colour 5	
			043-049	Colour 6	
			050-056	Colour 7	
			057-066	White + Colour 1	
			067-076	Colour 1 + Colour 2	
			077-086	Colour 2 + Colour 3	
			087-096	Colour 3 + Colour 4	
			097-106	Colour 4 + Colour 5	
			107-116	Colour 5 + Colour 6	
			117-127	Colour 6 + Colour 7	
			128-189	Colour wheel rotation, slow to fast CW	
			190-193	Colour wheel rotation, stop	
			194-255	Colour wheel rotation, slow to fast CCW	
		6	4	Gobo	000-007
	008-015			Gobo 1	
	016-023			Gobo 2	
	024-031			Gobo 3	
	032-039			Gobo 4	
	040-047			Gobo 5	
	048-055			Gobo 6	
	056-063			Gobo 7	
	064-071			Open	
	072-079			Gobo 1 shake	
	080-087			Gobo 2 shake	
	088-095			Gobo 3 shake	
	096-103			Gobo 4 shake	
	104-111			Gobo 5 shake	
	112-119			Gobo 6 shake	
	120-127			Gobo 7 shake	
	128-189			Gobo wheel rotation, slow to fast CW	
	190-193			Gobo wheel rotation, stop	
	194-255			Gobo wheel rotation, slow to fast CCW	

16 BIT	8 BIT	FUNCTION	VALUE	DESCRIPTION			
7	5	Shutter	000-007	Shutter closed			
			008-015	Shutter open			
			016-131	Strobe effect, slow to fast			
			132-139	Shutter open			
			140-181	Fast close, slow open			
			182-189	Shutter open			
			190-231	Fast open, slow close			
			232-239	Shutter open			
			240-247	Random strobe			
			248-255	Shutter open			
			8	6	Master dimmer	000-255	Dimmer 0-100%
			9	7	Pan /Tilt speed	000-255	Speed 0-100%
			10	8	Function	000-069	No function
070-079	Black out by Pan/Tilt moves						
080-089	No function						
090-099	Black out by colour changes						
100-109	No function						
110-119	Black out by gobo changes						
120-199	No function						
200-209	Reset all						
210-249	No function						
250-255	Sound active mode						
11	9	Dim mode				000-020	Standard
			021-040	Stage			
			041-060	TV			
			061-080	Architectural			
			081-100	Theatre			
			101-255	Standard			

REMOTE CONTROL

STAND BY - Press this button to activate the Moving head.

FULL ON - Press this button to switch on the LED illumination. You must hold the button, then all LEDs will go on.

GOBO - Press this button to select the individual gobo via 1-9 buttons.

SOU/TILT - By means this button allows you to switch between fast and slow pan / tilt movements.

"DIMMER +" AND "DIMMER -" - Press this button to adjust the brightness level.

STROBE - Press this button to activate the strobe function. You have 2 strobe effects. Short press functions as a flash function. If you want a strobe, you'll need to hold the button.

COLOR - Press this button to select the individual colour via 1-9 buttons. (1 Red; 2 Green; 3 Blue; 4 White; 5 Yellow; 6 Magenta; 7 Cyan; 8 Pink; 9 White all colours on). Adjust the brightness level via "DIMMER +" and "DIMMER -".

SOUND ON & OFF - These buttons activate and deactivate the sound active mode.

SHOW - Press this button to active the show mode. Use the 1-4 buttons to select your desired built-in programs.

