

DMX Channel Setting

Channel 1 – Dimmer intensity

0-63	Laser Black Out
64-127	Auto Program
128-191	Sound-controlled
192-255	DMX Mode

Channel 2 – Patterns (when CH1 is set between 192-255)

0-255	32 patterns
-------	-------------

Channel 3 – Zoom

0-127	Zoom from 100% – 5%
128-169	Zoom In from 100% – 5% (slow to fast)
170-209	Zoom Out from 5% - 100% (slow to fast)
210-255	Zoom In and Out from slow to fast

Channel 4 – Y-axis Rolling

0-127	0-359 degree fixed Y Axis rolling
128-191	Clockwise rolling from slow to fast
192-255	Counterclockwise rolling from slow to fast

Channel 5 – X-axis Rolling

0-127	0-359 degree fixed X Axis rolling
128-191	Clockwise rolling from slow to fast
192-255	Counterclockwise rolling from slow to fast

Channel 6 – Z-axis Rolling

0-127	0-359 degree fixed X Axis rolling
128-191	Clockwise rotation from slow to fast
192-255	Counterclockwise rotation from slow to fast

Channel 7 – X-axis Moving

0-127	128 different fixed positions on X Axis
128-191	Clockwise moving from slow to fast
192-255	Counterclockwise moving from slow to fast

Channel 8 – Y-axis Moving

0-127	128 different fixed positions Y Axis
128-191	Clockwise moving from slow to fast
192-255	Counterclockwise moving from slow to fast