


LED MINI SPIDER LIGHT

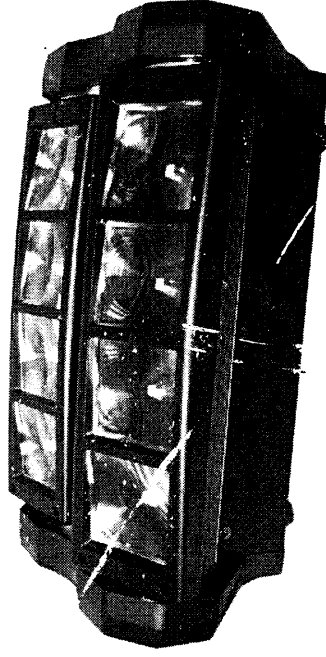

8	LED4 Dimming	0-255	0---100%
9	LED5 Dimming	0-255	0---100%
10	LED6 Dimming	0-255	0---100%
11	LED7 Dimming	0-255	0---100%
12	LED8 Dimming	0-255	0---100%
13	Marco Function	0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		38-47	Effect 4
		48-57	Effect 5
		58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
		98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
		157-166	Effect 16
		167-176	Effect 17
		177-186	Effect 18
		187-196	Effect 19
		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
		227-236	Effect 23
		237-246	Effect 24 Self-propelled multi-effects*
		247-255	Effect 25 Sound
14	Effect speed	0-255	From slow to fast
15	Reset	241-250	For 5 seconds to reset

Please Read Over This Manual before Operating the Light Fixture

Menu:

ADDR	A001-A512	Address Setting
CHND	7CH	7 Channel option
	15CH	15 Channel option
	MAST	Master option
SLND	SLAV	Slave option
	Soun	Sound control selected
SHND	Sh1---sh24	Effect selected. Sh24 auto effect;SPEED
		01-08 speed from slow to fast
SOUND	ON,OFF	Sound control Switch
SENS	0-100	Sound Sensitivity(0 close,100 the most)
LED	OFF	Background Light Switch
	NO	Background Light Switch
	NO	Reverse Display
LISP	YES	Reverse Display
TIL1	NO	Y1 Motor reverse
	YES	Y1 Motor reverse
	NO	Y2 Motor reverse
TIL2	YES	Y2 Motor reverse
TEST		Automatically Test
RSET	YES,NO	Reset

DMX Channel Function

7 Channel Mode

Channel	Function	Value	Instruction
1	Motor1 route	0-255	0° ---135°
2	Motor2 route	0-255	0° ---135°
3	Sum Dimmer	0-255	0---100%
4	Strobe	0-9	No Strobe
		10-255	Strobe speed from slow to fast
		0-7	No Effect
		8-17	Effect 1
		18-27	Effect 2
		28-37	Effect 3
		38-47	Effect 4
		48-57	Effect 5

5	Effect	58-67	Effect 6
		68-77	Effect 7
		78-87	Effect 8
		88-97	Effect 9
		98-107	Effect 10
		108-117	Effect 11
		118-127	Effect 12
		128-136	Effect 13
		137-146	Effect 14
		147-156	Effect 15
		157-166	Effect 16
		167-176	Effect 17
		177-186	Effect 18
		187-196	Effect 19
		197-206	Effect 20
		207-216	Effect 21
		217-226	Effect 22
		227-236	Effect 23
		237-246	Effect 24 Self-propelled multi-effects
		247-255	Effect 25 Sound
6	Effect speed	0-255	From fast to slow
7	Reset	241-250	For 5 seconds to reset

15 Channel Mode

Channel	Function	Value	Instruction
1	Motor1 route	0-255	60° ---150°
2	Motor2 route	0-255	60° ---150°
3	Sum Dimmer	0-255	0---100%
4	Strobe	0-9	No Strobe
		10-255	Strobe speed from slow to
5	LED1 Dimming	0-255	0---100%
6	LED2 Dimming	0-255	0---100%
7	LED3 Dimming	0-255	0---100%