



On/ Off LED

Press the button on/off quickly.

Manual light-dimmer

0-255 Manual light-dimmer R/G/B.

Press the up and down keys to change red light brightness, the greater the numerical the light brighter.

Color selection

Level 1-64 change through the up and down keys to select different color combinations

Gradual change

Level 1-6 change, change speed by up and down key, the greater the value the faster.

Pulse change

Level 1-16 change, change speed by up and down key, the greater the value the faster.

Hopping change

Level 1-16 change, change speed by up and down key, the greater the value the faster.

Save

Set the value stored in the key, the next starting up for the current interface function.

Console mode

Using the arrow keys and codes between numerical or by numerical keys selected address code numerical no access control platform D001 as the slave machine.

Sound activated

The color changed with the rhythm of the music.

Upward choose

To increase the numerical value.

Downward selection

To reduce the numerical value.

Digital key

Choose a different address codes for console.

LCD Digital display function:

Key-press	Mode	Description
[MENU]	Function	DMX control/ colors selection/ color pulse/ colors transition/ sound control/ manual set
[UP]	Up	Increase values
[DOWN]	Down	Decrease values
[ENTER]	Enter	Confirmation button. After pressing this button, all setting values will be saved.

Operation Instructions

MENU	Description
D001 - D512	DMX mode, change numerical value by up and down
CC01 - CC64	Colors selection, select different colors by up and down
RB01 - RB16	Colors shade, change speed by up and down, the bigger values, the faster
PL01 - PL16	Colors pulse transform, change speed by up and down, the bigger values, the faster
SD01 - SD16	Colors transition change speed by up and down, the bigger values, the faster
Sound	Sound control mode
R000 - R255	Manual set R, Red color brightness setting, change brightness by up and down
G000 - G255	Manual set G, Green color brightness setting, change brightness by up and down
B000 - B255	Manual set B, Blue color brightness setting, change brightness by up and down

DMX Control Parameter Chart

Channels	Value	Function
CH1	0 - 255	Color brightness control (this change should use together with CH2, CH3 or CH4)
CH2	0	Red light off
	1 - 255	Red brightness from dark to bright
CH3	0	Green light off
	1 - 255	Green brightness from dark to bright
CH4	0	Blue light off
	1 - 255	Blue brightness from dark to bright
CH5	0 - 7	No strobe flash
	8 - 255	Strobe flash (from slow to fast), the bigger values, the faster
CH6	0 - 10	Manual control (CH1-CH5)
	11 - 60	Colors selection (colors contorted by CH7)
	61 - 110	Colors shade (colors contorted by CH7), the bigger values, the faster
	111 - 160	Colors pulse transform (speed contorted by CH7), the bigger values, the faster
	161 - 210	Colors transition (speed contorted by CH7) the bigger values, the faster
	211 - 255	Sound control
CH7	0 - 255	Colors selection / colors shade (the bigger values, the faster)