


DMX Channel Values (13 Channel for Spot)

10001

CHANNEL	VALUE	FUNCTION
1	000 — 255	Pan
2	000 — 255	Pan Fine
3	000 — 255	Tilt
4	000 — 255	Tilt Fine
5	000 — 255	Vector Speed (Normal — Slow)
		Dimmer/Strobe
	000 — 007	Closed
	008 — 134	100-0%
	135 — 239	Strobe (slow — fast)
	240 — 255	Open
6		Red
7	000 — 255	0-100%
		Green
8	000 — 255	0-100%
		Blue
9	000 — 255	0-100%
		Color Macros
	000 — 007	No Function
	008 — 015	White
	016 — 022	Red
	023 — 034	Green
	035 — 049	Blue
	050 — 063	Cyan
	064 — 077	Magenta
	078 — 091	Yellow
	092 — 105	Purple
	106 — 119	Orange
	120 — 133	Plum/Pearse
	134 — 147	Pink
	148 — 161	Brown
	162 — 175	Gold
	176 — 189	Crimson
	190 — 203	Violet
	204 — 217	Indigo
	218 — 231	Crape
	232 — 255	Color-Change Macro 1
10		
11	000 — 255	Vector Speed (Color)
		Movement Macros
	000 — 007	No Function
	008 — 022	Auto Program 1
	023 — 037	Auto Program 2
	038 — 052	Auto Program 3
	053 — 067	Auto Program 4
	068 — 082	Auto Program 5
	083 — 097	Auto Program 6
	098 — 112	Auto Program 7
	113 — 127	Auto Program 8
	128 — 142	Sound Active 1
	143 — 157	Sound Active 2
	158 — 172	Sound Active 3
	173 — 187	Sound Active 4
	188 — 202	Sound Active 5
	203 — 217	Sound Active 6
	218 — 232	Sound Active 7
	233 — 255	Sound Active 8
12		
13		
		Gobo
	0-7	0-7
	8-15	8-15
	16-23	16-23
	24-31	24-31
	32-39	32-39
	40-47	40-47
	48-55	48-55
	56-63	56-63
	64-71	64-71
	72-79	72-79
		Gobo 01 Shake (from slow to fast)
		Gobo 02 Shake (from slow to fast)
		Gobo 03 Shake (from slow to fast)
		Gobo 04 Shake (from slow to fast)
		Gobo 05 Shake (from slow to fast)
		Gobo 06 Shake (from slow to fast)
		Gobo 07 Shake (from slow to fast)
		Gobo 08 Shake (from slow to fast)
		Gobo 09 Shake (from slow to fast)
		Positive rainbow effect with increasing speed
		Negative rainbow effect with increasing speed
		230-255

LED Light P6 6-0

Mini spot / wash

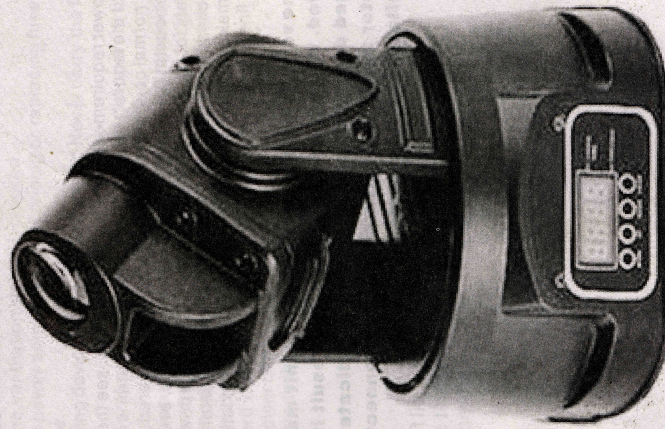

USER MANUAL