

16 Channel Definition Table

| Channel | Value | Description |
|---------|------------------------|----------------------------|
| CH1 | 000-255 | X |
| CH2 | 000-255 | X-Fine |
| CH3 | 000-255 | Y |
| CH4 | 000-255 | Y-Fine |
| CH5 | 000-255 | XY SPEED |
| CH6 | 000-255 | Dimmer (0-100%) |
| CH7 | 000-009 | Shutter closed |
| | 010-245 | Strobe effect slow to fast |
| | 246-255 | Shutter open |
| CH8 | 000-255 | Red |
| CH9 | 000-255 | Green |
| CH10 | 000-255 | Blue |
| CH11 | 000-255 | White |
| CH12 | 000-255 | Color Temp |
| CH13 | 000-010 | closed |
| | 011-020 | R |
| | 021-030 | G |
| | 031-040 | B |
| | 041-050 | W |
| | 051-060 | R+G |
| | 061-070 | G+B |
| | 071-080 | B+W |
| | 081-090 | R+B |
| | 091-100 | G+W |
| | 101-110 | R+W |
| | 111-120 | R+G+B |
| | 121-130 | R+G+W |
| | 131-140 | G+B+W |
| | 141-150 | RGBW |
| 151-255 | Jump from slow to fast | |
| CH14 | 000-010 | Macro Color Line (Disable) |
| | 011-255 | Slow from slow to fast |
| CH15 | 000-020 | Empty |
| | 021-040 | Internal program 1 |
| | 041-060 | internal program 2 |
| | 061-080 | internal program 3 |
| | 081-100 | internal program 4 |