F7001

Digital Display:

(MENU→UP→DOWN→ENTER)

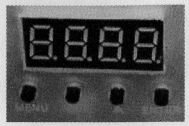

VALUE	FUNCTION
A001~A511	DMX Mode
A 11~A 19	R Motor speed from slow to fast
A 21~A 29	G Motor speed from slow to fast
A 31~A 39	B Motor speed from slow to fast
A 41~A 49	W Motor speed from slow to fast
A 51~A 59	RGBW Jump change,motor speed from slow to fast
A 61~A 69	Multi-color jump change,motor speed from slow to fast
A 71~A 79	Multi-color gradual change,motor speed from slow to fast
A 81~A 89	Strobe,motor speed from slow to fast
S1 1~S120	Sound Mode 1
S2 1~S220	Sound Mode 2

DMX Channels :

CHANNEL	FUNCTION
CH1	Master Dimmer
CH2	Red Dimmer
CH3	Green Dimmer
CH4	Blue Dimmer
CH5	White Dimmer
CH6	0~9: No Strobe
	10~255: Strobe Effect
CH7	Motor speed
	0~5, Motor stop running
	6~126: Motor positioning operation
	127~255: Motor speed from slow to fast
CH8	0~9: Manual mode (CH1-CH7)
	10~72: Multi-color gradual change
	73~134: Multi-color jump change
	135~197: R-G-B-W Jump Change
	198~220:: Sound mode 1
	221~255: Sound mode 2

FLASH

LED Mini Derby 4x3W
F7000598

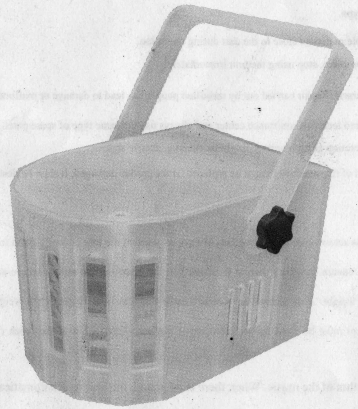

USER MANUAL

CE RoHs